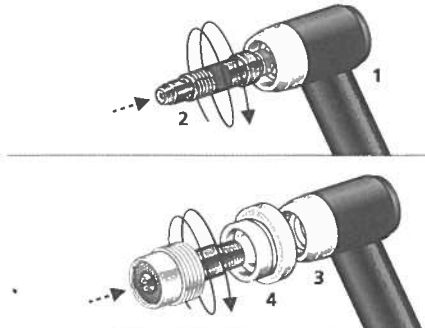
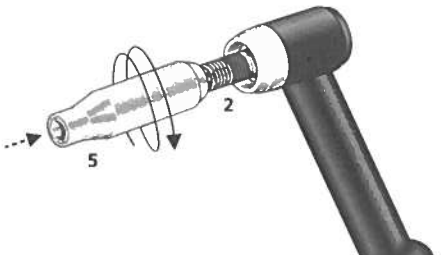
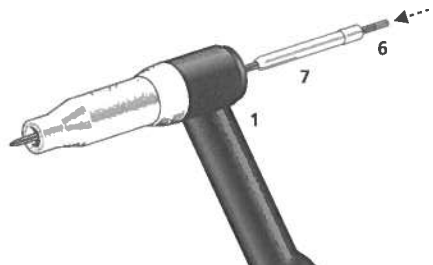
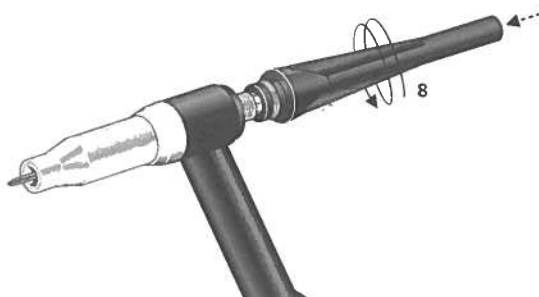


Brenner ausrüsten	Equipping the torch	Équiper la torche
-------------------	---------------------	-------------------

<p>1.</p> 	<p>Spannhül- sen- gehäuse [2] in den Brennerkörper [1] einschrauben</p> <p>Bei Gaslinsen und kurzem Spannhül- sengehäuse Isola- tor [3] und Adapter [4] laut Rückseite verwenden</p>	<p>Screw the collet body [2] into the torch body [1]</p> <p>For gas lenses and short collet bodies please use insula- tor [3] and adap- tor [4] according to reverse side</p>	<p>Visser le support collet [2] à l'avant du corps de torche [1]</p> <p>Avec le diffuseur et le support collet court, utiliser l'iso- lateur [3] et l'adap- tateur [4] (mode d'emploi au verso)</p>
<p>2.</p> 	<p>Gasdüse [5] auf Spannhül- sengehäuse / Gaslinse [2] aufschrauben</p>	<p>Screw the gas noz- zle [5] onto the collet body / gas lens [2]</p>	<p>Visser la buse gaz [5] sur le support collet / diffuseur [2]</p>
<p>3.</p> 	<p>Wolframelektrode [6] und Spannhül- se [7] von hinten in den Brenner- körper [1] stecken</p>	<p>Insert the tung- sten electrode [6] and the collet [7] from behind into the torch body [1]</p>	<p>Insérer l'électrode tungstène [6] et la pince étau [7] à l'arrière du corps de torche [1]</p>
<p>4.</p> 	<p>Brennerkappe [8] aufschrauben</p>	<p>Screw the torch cap [8] into the torch body</p>	<p>Visser la coiffe [8]</p>